

FLEXPOST-SM™ ANCHORING INSTRUCTIONS FOR ASPHALT

Tools Required:


- Rubber Mallet/Hammer
- Wax Pencil / Marker
- 3/8" Masonry Drill Bit
- 1/2" Ratchet or Wrench
- Philips Head Screwdriver

Parts Included:


- 1 Base Plate
- 4 Orange Expansion Plugs
- 4 Hex Lag Screws
- 4 Flat Washers
- (1) 5/8" Philips Head Set Screw




- Place base plate in desired anchoring location
- Mark the four base holes with a wax pencil or marker before drilling

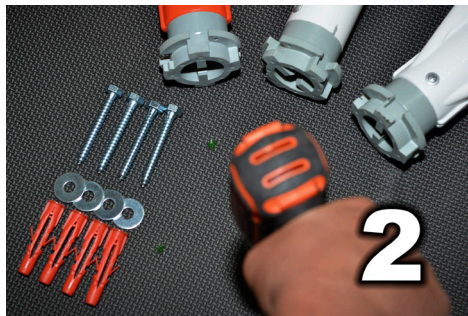


- Using a 3/8" masonry bit, drill 2.5" in depth

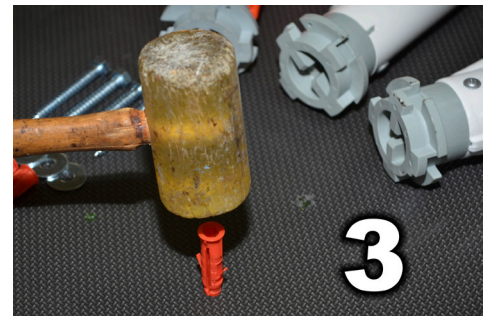

- Use a rubber mallet to stuff expansion plugs into the drilled holes.
- Make sure the top of the expansion plug is even with asphalt

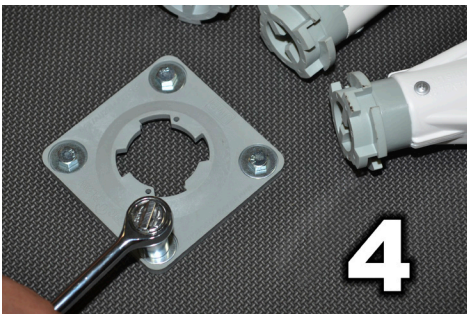

- Place the base plate over holes and use a socket wrench with a 1/2" drive to thread all four lag screws

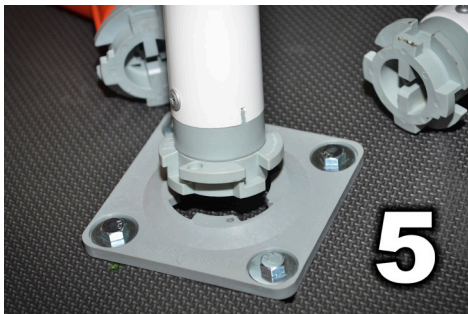

- Insert the post, turn counter-clockwise 45° to set it in place



- With a philips screwdriver, install the 5/8" set screw to lock in securely



2236 112th Ave, Suite 80
Holland, MI 49424
616-928-0829 • www.FlexpostInc.com