

FLEXPOST-XL™ BASE ANCHORING INSTRUCTIONS FOR ASPHALT

Tools Required:

- Rubber Mallet
- Wax Pencil / Marker
- 3/4" Masonry Drill Bit
 - 15/16" Ratchet
- Torque Wrench (Optional)
 - 3/16" Allen Key



IMPORTANT NOTE:
SPRING SHOULD
APPEAR CURVED
- DO NOT CUT WIRE -

Parts Included:


- 1 Base Plate
- 4 Expansion Plugs
- 4 Hex Lag Screws
- 4 Flat Washers
- (1) 3/16" Allen Key
- 1 Set Screw

IMPORTANT: MUST INSTALL BASE AT LEAST 10" FROM ANY CURB




1

- Place base plate in desired anchoring location
- Mark the four base holes with a wax pencil

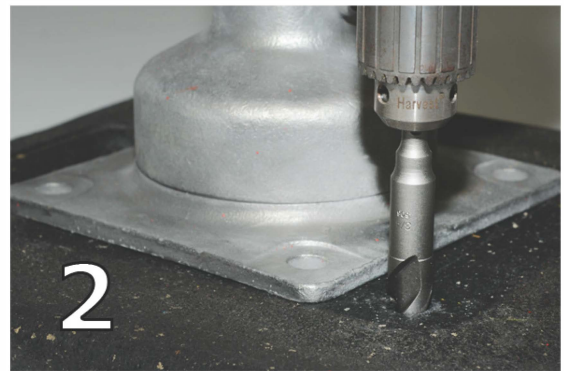

2

- Using a 3/4" masonry bit, drill 5" in depth

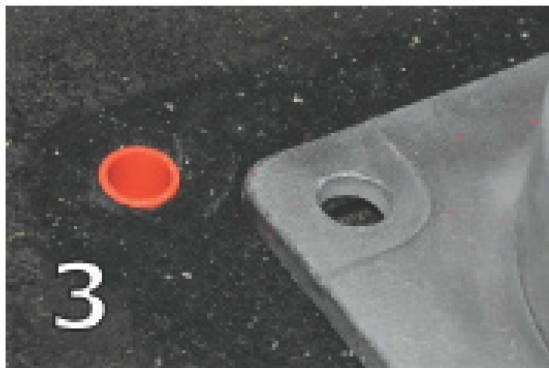

3

- Use a rubber mallet to tap the expansion plugs into the drilled holes
- Make sure the top of each expansion plug is flush with the asphalt surface



4

- Place the base plate over the four holes and use a socket wrench with a 15/16" drive to thread all four hex lag screws into the expansion plugs

FLEX
POST®

2236 112th Ave, Suite 80
Holland, MI 49424
616-928-0829 • www.FlexpostInc.com