

FLEXPOST XL MOUNTING INSTRUCTIONS FOR GROUND

Tools Required:

- 2x 1/2" Socket Wrenches
- 60 lb Bag of Quick Setting Cement
- Leveling Tool • 3/16" Allen Key


Parts Included:

- 1 XL Ground Spike
- 4 Stainless Bolts (1/2 - 13 x 1 1/4)
- 4 Lock Nuts (1/2-13)

CALL BEFORE YOU DIG!

CALL 811 AT LEAST A FEW DAYS BEFORE YOU START ANY DIGGING PROJECT.

**FOR PROPER FUNCTIONALITY, YOU MUST USE
QUICK SETTING CEMENT OR A SIMILAR MATERIAL**

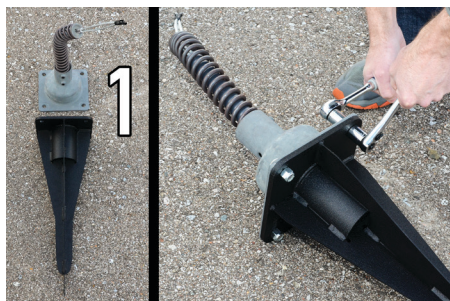

- Mount the XL Base and XL Ground Spike together using the 4 bolts and 4 nuts provided using two 1/2" socket wrenches



- Dig a hole apx. 18" deep and 6" wide. Put the ground spike in the hole to make sure the XL base is level with the ground



- Remove base, fill hole with quick setting concrete. A 60 lb. bag should fill this hole 3/4 full



- Place the XL Base and ground spike in the concrete. Fill the rest of the hole with excess dirt



- LEVEL, check all 4 sides with your level. Follow manufacturer instructions for setting and curing



- Wait 10 minutes, re-level. Once concrete is cured to manufacturer specifications, move on to the next page for assembly instructions



2236 112th Ave, Suite 80
Holland, MI 49424
616-928-0829 • www.flexpostinc.com